



TABLE OF CONTENTS

ACCESSORIES tearstim PRECAUTIONS FOR USE GLOSSARY tearstim TOUCHSCREEN	6 10 14 16
SOLUTION TO IMPROVE DRY EYE USING THE tearstim	20
CHANGING THE tearstim OPTIC CARTRIDGE SOFTWARE OPTIONS	30 36
PROHIBITED ACTIONS USE OF ACCESSORIES MAINTENANCE ASSISTANCE MARKING TECHNICAL CHARACTERISTICS STANDARDS GUARANTEE CONDITIONS CONTACT	38 40 42 44 46 47 52 53 55

Dear Sir or Madam,

As the recent purchaser of an **tearstim**, I would like to thank you for your confidence in our product.

Habits are changing, and the **tearstim** is a practical example of this fact. Your clients can now enjoy the benefits of a new solution to improve dry eye using state-of-the-art pulsed light technology, with complete safety and in a compact format.

You have my personal assurance that the greatest care has been taken in the manufacture of each **tearstim**; as you will see for yourself, **tearstim** is an exceptional product.

I hope that your device will give you complete satisfaction, and that you will choose to share your experience on the website **www.keepyoureyesfit.com**.

With sincerest regards,

Yves Vincent Brottier

Creator of the **tearstim**

device here: https://gateway.esw-vision.com.

After receiving your tearstim, you shall create your customer account and register your

• An activation card provided with each Optic cartridge.

Optic Cartridge use is controlled by two ways:

• An Optic cartridge activation code that enables use of a new cartridge.

After registration of your tearstim, you will be able register your new Optic cartridges and get activation codes at https://gateway.esw-vision.com.

ACCESSORIES tearstim



1 **tearstim** base unit and applicator.



1 Optic Consumable cartridge Part Number V536_010A___



1 activation card **tearstim**. (delivered with □□ti□)



gel (flashing intended gel – 260 ml). Part Number V000__007A01A



Pairs of Eye mask protective shells (in special packaging). Part Number: V000_014A___



clean Optical spray. Part Number: V000__018A___



Patches
Self-adhesive patches
(self-adhesive patches per sheet).
Part Number: V000_020A___



Stop Guide plate. Part Number: V000_016A___



Power cord.
Part Number: V036EU013A00A



mask - Protective glasses.
Part Number: V000_012A___



User manual.
Part Number: see on last page



PRECAUTIONS FOR USE

» FOR YOUR SAFETY

Before using your **tearstim**, the following information should be read carefully:

- Service voltage: 100 240 V a.c.
- Rated frequency: 50-60 Hz.
- Maximum power consumption: 240 VA.
- Check that this voltage is consistent with the voltage rating of your installation. Any connection error may cause irreparable damage which is not covered by the guarantee.
- Check that the power socket to which your **tearstim** is connected is not damaged, is in perfect working order, and will not impair the correct use of your **tearstim** (the power socket must be easily accessible).
- This device is reserved exclusively for the use of eye specialists.
- Never disconnect the **tearstim** by pulling on the power cord.
- Never use the tearstim with wet hands.
- The **tearstim** must not be used in any location in which the device might be exposed to water spray (on either the applicator or the base unit).
- Never immerse the tearstim base unit, its applicator or the tearstim Optic cartridge in water.
- The **tearstim** must not be used if it is damaged, in case of the display of a functional anomaly on the touch screen, or if the device has been dropped (concealed damage may jeopardize your safety and the safety of your client).
- This device can only be repaired using special tools. In case of any problems after delivery, contact us on our website at estore.esw-vision.com using your personal space.
- tearstim Optic cartridges, and all accessories in general, must be ordered exclusively from our website at estore.esw-vision.com, on the «Client space», using the «New order for accessories» tab. We cannot accept any liability associated with the use of consumable cartridges and accessories supplied by another manufacturer.
- During operation, the device must be positioned on a flat supporting surface, in a location where there is no risk of the device being dropped.

- E-Swin SAS cannot accept any liability for damage resulting from the incorrect use of the device, or from the use of the device other than as described in the present user manual.
- Attention Using controls or setting or performance of procedures others than those specified in this user manual may result in exposure to dangerous optical radiation.
- Each of your clients must be supplied with a pair of EYO MASK protective shells. The protective shells EYO MASK must be worn throught the operation of the device by the client.
- One pair of glasses mask is supplied with the device: these glasses must be worn throughout the operation of the device by the professional user of the **tearstim**. Any other person in the vicinity during the operation of the **tearstim** must also wear these glasses.
- Once the **tearstim** is in service, it must not be brought into contact with the hair, the area covered by the EUP mask protective shells, clothing or any other object, in order to avoid any risk of injury, obstruction or deterioration.
- The tip of the applicator must not be in contact with the EYR mask shells at the time of administration of the flash.
- The device must never be used in the proximity of an aerosol, in the proximity of a heat source, or in the proximity of other electronic devices.
- The device must not be stacked on other electronic devices.
- Your **tearstim** is supplied with a mains lead (2 metres in length) and an applicator lead (2 metres in length). No extension cable, or any cable other than those supplied by E-Swin, should be used the device may otherwise be rendered non-compliant for electromagnetic purposes.
- Wireless communication devices must be kept at a distance (approximately 3 metres), as these may impair the correct operation of the device.
- The device must be installed in an environment which is substantially free of electromagnetic interference (from computers, electrical solution appliances, etc.).

PRECAUTIONS FOR USE


>> COMPATIBILITY CRITERIA


tearstim must not be used on persons who are unsuitable for pulsed light procedure; specifically, where one of the following criteria are fulfilled:

- On pregnant women.
- On black skin (phototype VI).
- On sunburned skin which has healed within the last month.
- In case of a previous history of sunlight allergy.
- On skin that has been exposed to high pressure UV for less than ten days.
- On persons who have applied a self-tanning product (cream, dietary supplement) for less than two months ago.
- On an injured, burned, or infected skin.
- On skin lesions of unusual appearance, which will require investigation.
- On high-risk areas (blemishes, birthmarks, warts, unhealed wounds...).
- On persons suffering from a skin condition (eczema, inflammation, acne...).
- On moles: if they are located on the zone to be solutioned, they must first be protected, for example by covering them with the self-adhesive patches provided with your **tearstim**.
- On eyelids with permanent tattoos.
- On tattooed areas: permanent make-up, or cosmeti tattos, of whatever colour. In this case, use the Stop delimitation plate.
- On eyelids with make-up applied.
- On persons undergoing photo-sensitising procedure: depending upon medical opinion, these persons may not be accepted for solution with the **tearstim**.
- On persons with a previous history of cutaneous pathology.
- On diabetics, hemophiliac, epileptics, persons suffering of tardive cutaneous porphyria.
- On persons wearing a pacemaker or cardiac defibrillator.
- On animals.

» tearstim PROCEDURES

- Unperfumed micellar cleansing water is used to remove any cosmetic residues (make-up) from the skin.
- Zone concerned:
 - Apply 8-10 flashes on the cheekbone and left temporal area according the drawing on your right.
 - Repeat the same procedure under the right side.
- After flash procedure, the application of cosmetic products is possible.
- The specific **tearstim** protocol consists of 3 sessions as follows:
 - Day 0
 - Day 15
 - Day 45
 - (Day 75 optionnel)

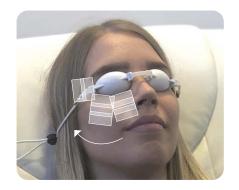

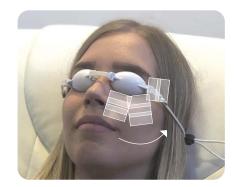


GLOSSARY

» BASE



» APPLICATOR

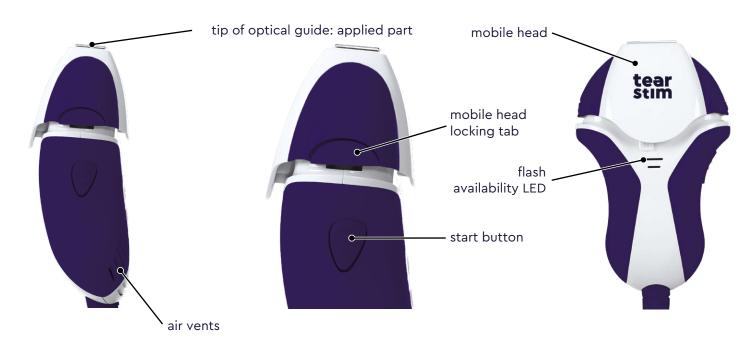

INFORMATION PROVIDED BY THE tearstim'S TOUCHSCREEN

ON / OFF OF THE DEVICE

1 On/off switch.

AREAS OF SAFETY ICONS

- 2 Reading the instruction manual.
- **3 tearstim** must not be used in certain physiological or medicated contexts (pregnant women, photosensitising drugs...).
- 4 the GQl is mandatory.
- 5 Spillage of water on any part.

HOW TO PROGRAMME A SESSION

- 6 Wearing the safety glasses ⋒a≤k is mandatory.
- 7 Wearing the ELJQ MaSk protective shells is mandatory.
- 8 The skin colour.
 This area allows you to select the colour of the skin, from the lightest (bottom) to the darkest (top).
- The level of intensity. The gauge represents the 6 levels of intensity of the issued flash. The arrows adjacent to this gauge enable you to increase or decrease the level of intensity.
- 10 Play.
 Enables you to cancel the pause mode and to resume the dry eye session.
- 11 Pause.

 This icon is displayed on the touch screen throughout the duration of the dry eye session. Pressing it allows you to put the device in pause mode.

THE BASE OF **tearstim**IS EQUIPPED WITH A TOUCH SCREEN





BROWSING AREA

- 12 These buttons enable you to move from one character to another (22), and to increase or decrease the digits of each character.
- 13 Go back to the previous menu. This icon enables you to modify any selection made previously. It is available only when icons
 16 and 20 have been selected.
- 14 Validation of input data (22).

INFORMATION IN REAL TIME

- 15 Volume activation/deactivation.
- 16 Lock / unlock. This icon enables you to secure your **tearstim** with a PIN code.
- 17 Warning.

 A number is displayed on the touch screen when this icon is active; it corresponds to an error message.
- 18 Detection of the activation card.
- 19 Temperature of the applicator. This icon is not active during normal functioning of the device. If it blinks, please refer to the corresponding error message.
- 20 Cartridge tube.
 When it is blinks, it means that you can flash.
- 21 Numbers 1 and 2 correspond respectively to the first input, then to the second input that confirms the secure PIN.
- 22 All these characters enables you to enter the secure PIN code of **tearstim**, and also to show the remaining number of flashes at any moment.



SOLUTION TO IMPROVE DRY EYE USING THE tearstim

» BEFORE EACH USE

VERIFICATION

- Check the power cord (must not be pinched or crushed, wire must not be bare).
- Check the cable connecting the base to the applicator (no visible impairment).
- Check the external optical parts of **tearstim**.

Check that the glass tip of the applicator (opticalguide) is intact, and if this is not the case, changing the mobile head is essential. Ordering this part can be made at **estore.esw-vision.com** (go to «Customer Centre», «New Order of accessories» then «mobile head applicator»).

- Verification and maintenance of the internal optical parts.
- In all cases, before you start disassembling of the mobile head, the device must be unplugged.
- Before each use, and before plugging-in **tearstim**, you must check the integrity of the internal optical parts: tube, filter (Flat red piece made of glass), and optical guide. The filter must be cleaned systematically before each dry eye session with **tearstim**. It must be clean and free of dust.

To check:

- Press simultaneously on the 2 locking tabs of the mobile head, and remove it 1.
- Delicately place the mobile head on a flat surface.










- Removing the Optic cartridge with filter (video available on your personal customer page).
- Once the mobile head is removed, the Optic cartridge with filter appears in the applicator 2.
- Remove the cartridge from the applicator: press firmly on the filter support (3) and pull (4) The Opti⊂ cartridge with filter is now removed (5); it is imperative to hold it only by the plastic parts at either end.
- Cleaning of the internal optical parts.
- Once the filter cartridge is removed, the transparent optical glass is also available **6** .
- Select the Clad∩ spray: spray it on a lint-free cloth beforehand 7.

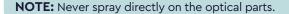

- Afterwards clean only the accessible side of the filter with this cloth 8. Repeat the same procedure for the accessible part of optical glass 9.

NOTE: The filter must never be separated from its optic cartridge.

- When cleaning is done, take the Optic cartridge 10 and align it with the applicator with the help of the red dots 11. Push it into the slide way of the applicator by pressing on it, so as to ensure that it is properly maintained 12.
- Re-attach the mobile part of the applicator by pressing simultaneously on the locking tabs of the mobile head 13, making sure to align the internal red dot of the head with the red dot of the applicator.





















SOLUTION TO IMPROVE DRY EYE USING THE tearstim

» STAGE 1

PREPARING THE PERSON RECEIVING THE SESSION

- The person has to be settled in an examination and treatment chair lying or sitting.
- The skin must be clean, dry and free of any cosmetic products.
- Check that no cream, moisturizing lotion, oil or any other substance has been applied to the skin beforehand.

» STAGE 2

NOTE: Before using the activation card, make sure your **tearstim** have been registered on the website: https://gateway.esw-vision.com and you have entered the activation codes for your "□□ti□ cartridge". (See the instruction on the section "CHANGING THE **tearstim** OPTIC CARTRIDGE" (page 30).

USING THE ACTIVATION CARD

tearstim operates with an activation card.

This card is specific to the optic cartridge with which it has been delivered.

- Take the activation card of your □□ti□ cartridge.
- Insert the card as far as it goes into the lateral slot (A and B).
- Leave the card in this slot throughout the entire dry eye session.
- At the end of the session, remove the activation card, take care not to damage it, and store it in its case.
- Follow the procedure to switch off the device.





SOLUTION TO IMPROVE DRY EYE USING THE tearstim

» STAGE 3

STARTING AND SETTING UP tearstim

· Connect tearstim to its power cord.

tearstim issues three beep sounds; the screen is black A. Just press anywhere on the screen to enable all icons to appear B. These icons are explained on pages 14 and 15. The display of all menus is temporary. Only the safety icons keep blinking.

• Unlock the safety features C.

It is mandatory to validate each safety feature by pressing on each safety icon one by one (the order of validation does not matter).

Once all the safety icons are validated, all the other settings icons for the flash will be available.

If an icon has not been validated, it will continue to blink. You will not be able to set up or use your **tearstim** if all the safety features have not validated.

• Setting up your dry eye session.

Simply complete your own information to each flashing icon to set up your dry eye session. You need to press on the validation icon 14 to select each one of them 14. All the settings must have been validated to be able to use **tearstim**. If any of them have not been validated, the icon will continue to blink.







IDENTIFY THE COLOUR OF THE SKIN D

Choose the colour of the skin 8 from the lightest (bottom) to the darkest (top).

ADJUST THE DESIRED INTENSITY LEVEL E

The arrows located next to the intensity level icon (9), enable you to increase or to decrease the intensity or power of the issued flash.

Click on one of the two blue arrows, until it gradually reaches the desired intensity level. Each time you touch the energy settings icons, the energy level display is updated accordingly.

After setting your desirable intensity level, you must validate at the icon 9. (see picture F).








SOLUTION TO IMPROVE DRY EYE USING THE tearstim

TEARSTIM READY FOR USE G.

When the last setting has been validated, the pause icon located in the browsing area becomes visible.

The icon representing the lamp 20 blinks; the device is ready to flash. Also, at the area 22, you will see the two ranges of numbers display one after another:

■ The first display is the 4 digits (xxxx) to show you the remaining of available flashes of using the **tearstim** Optic cartridge before it needs to be changed H.

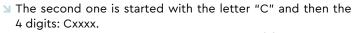

This number to show you the remaining of flashes on the activation card that are still available 1.







» STAGE 4

FLASH SESSION

- The EUD Mask should be correctly adjusted on the eyes of the person receiving the session and must be worn throughout the whole session.
- Any beauty spots should be covered using the patches.
- Apply the gel in a generous layer (minimum 1cm thick) on the cheekbone and the temporal areas, making sure that the gel does not get under the eye mask.
- Locate your mask and put them on. If there are other persons close to you during the operation of **tearstim**, they will also be required to wear mask glasses.



- Position the end of the optical guide on the QQL.
- The optical guide must be in full contact with the <code>gel</code>, but not with the skin.
- Trigger a flash by pressing the button on the front of the applicator.
- Release the button and generate a further flash, after moving the optical guide under one eye, starting from the inner canthus of the eye, up to the temporal area.
- Repeat the same operation until 8–10 flashes have been applied under each eye.



The applicator button must not be pressed until the green indicator light is illuminated. If the button is pressed too early (before the green indicator light is illuminated), a flash may not be generated.

NOTE: The GQL, the self-adhesive PatchQS, the guide plate StOD, the mask goggles and the QQQ mask protective shells used must be those supplied with your **tearstim**. The use of any other product may result in the risk of skin burns, and will invalidate the guarantee of your device.



IMPORTANT: No flash must be administered unless the EYR MASK protective shells are in place. The GRI will only be applied to the area which is to receive flashes once the EYR MASK shells are in place on the person receiving the session. Under no circumstances must the GRI penetrate below the EYR MASK shells.

SOLUTION TO IMPROVE DRY EYE USING THE tearstim

» STAGE 5

ENDING THE SESSION

- Press key 1.
- Once the fan located inside the applicator is off (after 10 minutes or so), the power cord can be unplugged. The other fans, located inside the base of **tearstim** will only stop when the device is unplugged.
- Clean the glass tip of the applicator (optical guide) with a damp cloth.
- Finish cleaning the optical guide with the spray □□□□ (images A and B).

For any intervention after using **tearstim**, you must wait for the fans located inside the applicator to turn off completely. This enables, among other things, the optical parts to cool down. The fans located in the base, for their part, only stop when the device is unplugged.








Once the dry eye programme has started, the device charges itself. Vertical bars scroll at the bottom of the touch screen, from right to left (where icon 22 is located). It also charges after each flash and precedes the display of the number of remaining flashes on the Optic cartridge. If the device is idle for 15 minutes, it will automatically go into «pause» mode.





CHANGING THE tearstim OPTIC CARTRIDGE

This step must be performed with utmost caution. Importer handling can result in permanent damage to the applicator and to **tearstim** in a more general way. The warranty does not cover importer handling. We therefore recommend you to be very attentive to the following procedure

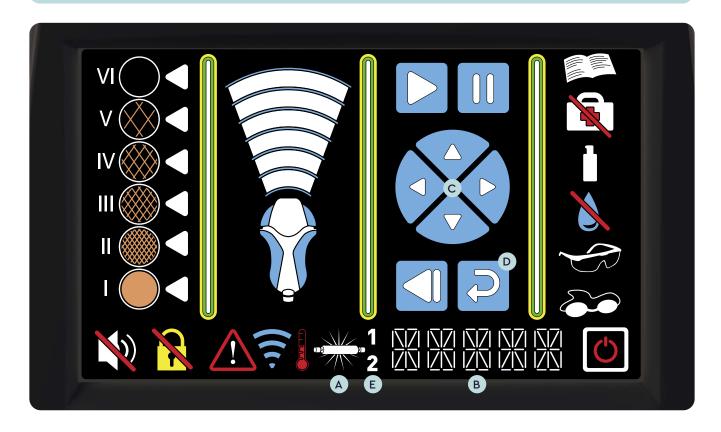

INFORMATION IN REAL TIME

- A Cartridge tube. When it is blinks, it means that you can flash.
- B All these characters enables you to enter the secure PIN code of **tearstim**, and also to show the remaining number of flashes at any moment.

» STAGE 1

In normal use the remaining number of flashes is displayed in area (B).

Two counters will be alternately displayed:

- Beginning by the C letter is the number of flashes remaining in the activation card,
- The other counter, beginning by a space, indicates the number of flashes still available in the tearstim.

The cartridge tube icon A indicates:

- When **tearstim** flash count is higher than A, the cartridge tube icon A is on.
- When **tearstim** flash count is below **A**, the cartridge tube icon **A** blinks. The cartridge may be replaced and a new cartridge activation code may be entered.
- When **tearstim** flash count reaches 0, the cartridge tube icon (A) is turned off and flash emission is no longer allowed. Cartridge must be replaced and a new cartridge activation code must be entered.
- When the activation card counter reaches 0, the cartridge tube icon (A) is turned off and flash emission is no longer allowed. Activation card must be replaced. An activation card is provided with each cartridge.

Note that a new cartridge activation code cannot be entered when **tearstim** flash count is greater than **A**.

» STAGE 2

Before turning off and unplugging your device, you must wait for the fan located inside the applicator to stop operating completely (this may take several minutes). This procedure enables the optical parts of the applicator to cool down; the other fans located inside the base of **tearstim**, will only stop once the device is unplugged.

» STAGE 3

- Turn off the device.
- Unplug the power cord from the device.

CHANGING THE tearstim OPTIC CARTRIDGE

» STAGE 4

EXTRACTING THE OPTIC CARTRIDGE

- Take the applicator and press simultaneously on the 2 locking tabs of the mobile head 16 and remove it.
- Once the mobile head is removed, the □ptic cartridge with filter appears in the applicator 17.
- Remove the □□tic cartridge from the applicator: strongly pinch the filter support 18 and pull 19. The □□tic cartridge with filter now appears 20, it is imperative to only hold the plastic parts 21.



The filter must never be separated from its optic cartridge. Caution: optic cartridge filter may be hot.

» STAGE 5

RECEPTION OF THE NEW OPTIC CARTRIDGE AND UNPACKING

Remove the new optic cartridge from the plastic box 22 & 23.

» STAGE 6

INSERTING A NEW OPTIC CARTRIDGE

(video available on your personal client page)

- Take the new Optic cartridge and check the direction of insertion of this new cartridge.
- Align the ⊃pti⊂ cartridge with the applicator using the red dots to guide you 24.














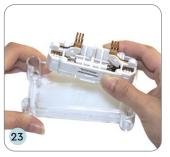

NOTE: The cartridges are not symmetrical, so they must be inserted in a specific way, absolutely not any other way. To help you, a red dot is placed underneath the cartridge. This dot must be oriented to match the side of the applicator that contains the ventilation grid, which is also marked with a red dot. You must therefore align the 2 red dots.

- Push it into the slide way of the applicator by pressing on both sides, so as to ensure that it is properly maintained 25.
- Re-attach the mobile part of the applicator by pressing simultaneously on the locking tabs of the mobile head 26 & 27, making sure to align the internal red dot on the head with the red dot on the applicator.
- After attaching the cartridge, you must make sure that it is positioned correctly: it must be aligned to the fix part of the applicator.












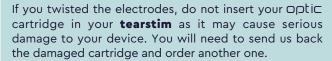

PRECAUTIONS: During the entire procedure of changing the Optic cartridge, you must under no circumstance touch the electrodes of the tube 30. If you accidentally touch the tube or its reflector, we urge you to send us back your cartridge to proceed to an exchange.

» STAGE 7

Before repositioning the mobile head of the applicator, you must always clean the filter (located directly on the Optic cartridge) with the spray clean, but use it only on its accessible surface. It is strictly forbidden to spray clean spray directly on the filter. It must be spray beforehand on a clean, dry cloth, and then use this cloth to clean the accessible surface of the filter 31.







CHANGING THE tearstim OPTIC CARTRIDGE

» STAGE 8

Re-attach the mobile head by pressing delicately as indicated on image to the right 32.

» STAGE 9

When the number of flashes expires, you must replace the Optic cartridge. It will be delivered with its activation card. The warranty does not cover improper handling. We therefore recommend you to be very attentive to the procedure to follow.

» STAGE 10

ENTERING AN ACTIVATION CODE

Register your Optic cartridge here: https://gateway.esw-vision.com and get your Optic cartridge activation code. This code is valid for a Tearstim serial number and an Optic cartridge serial number pair.

The code contains 10 digits in two 5 digist groups.



TO ENTER THE CODE IN THE TEARSTIM:

>> STEP 1:

Touch the display area B. You will get the following answer:

- The first character is a blinking 0
- The number 1 appear on the icon

You are ready to enter the first 5 digits of activation code.

>> STEP 2:

Use the arrow pad c to enter the digits

- Up and down arrows allow you to increase and decrease the digit value
- Left and right arrow allow you to go to next or previous digit

>> STEP 3:

As soon as you entered the 5 first digit of the activation code, double check the data you entered and validate with the symbol D

You will see the following answer:

 The number 2 appear on the icon E, meaning that you are ready to input the second part of activation code

>> STEP 4:

Enter the last 5 digit of activation code using arrow of icon c as per step2

>> STEP 5:

Double check the data you entered and validate with the symbol D

» STEP6:

If you succeeded entering the code, you will the following answer:

- The Tearstim flash counter will be updated
- The Cartridge tube icon A is now on.



SOFTWARE OPTIONS

» SOFTWARE OPTIONS

PIN CODE

It is possible to secure your **tearstim** by entering a PIN code. As long as a specific PIN code has not been entered, a red bar will appear on the lock icon (16). This means that the device is not locked; there is no code to enter.

By default, the PIN code is 0000. If you do not act on the PIN, you will not be asked for one when you boot the device. If, on the other hand, you change the default PIN code (0000), you will need to enter the new PIN code each time you restart **tearstim**.

• Change the PIN code

To change the PIN code, you must:

- Click on the lock icon 16. The number 1, located next to the lamp icon 20 will blink: you must therefore enter the first digit of your new code.
- Enter the PIN code (4 digits) with the help of the browsing icons 12. They will enable you to change the digit of each segment (vertical arrows) and to move from one segment to another (horizontal arrows). Once the 4-digit code is entered, validate them by clicking on icon 14. The number 2, located next to icon 20 will blink: you must enter the second digit of your new code.
- Enter your code a second time (confirmation entry) and revalidate (validation icon 14).

When the input is complete, you will automatically go back to the previous menu.

However, if the second code entered is different from the first code, the warning icon 17 will blink and the error message no.14 will be displayed. You must press the validation icon 14 and redo the entire procedure (enter the PIN code, then re-enter the same PIN code for confirmation).


When turning on your device, you will then be asked to enter the PIN code. The unlock icon 16 blinks (it is no longer crossed out by a red line). You must enter the PIN code (only once). If the code is correct, the safety icons will be displayed. If the code is not correct, the warning icon 17 will blink and the error message no.13 will be displayed.

Disable the PIN code

Disabling the PIN code is possible only when **tearstim** is already running, i.e. the PIN code you want to change has already been entered at start-up. You must then click once on the unlock icon 16, and enter the PIN code once.

• Modify an existing PIN code

Modifying an existing PIN code, while a former code already exists, is possible but only when **tearstim** is already running, i.e. the PIN you want to change has already been entered at start-up. You must click once on the lock icon 16 and enter the current code once, then validate it (validation icon 14). The device is unlocked; the red line on appears the lock icon 17. It is then possible to enter a new PIN code by following the same steps as those described previously.

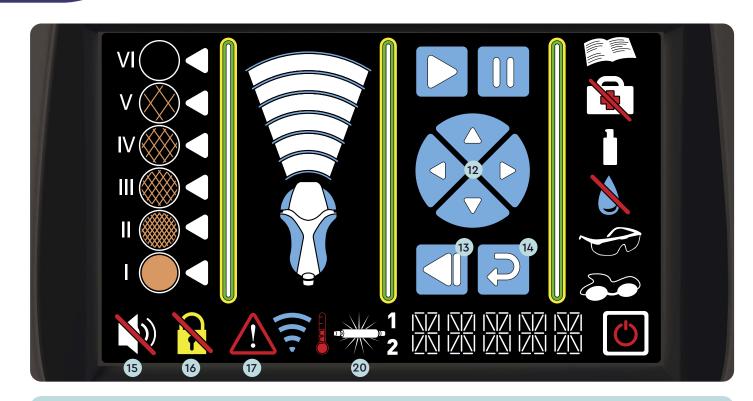

NOTE: If you have mistakenly selected the lock icon 16, and that you do not wish to enter a personalised PIN code, click on the go back icon 13.

IMPORTANT: If you cannot remember the PIN code you have entered, you must send us back your **tearstim** to allow our technical department to unlock your device. This service is not included in the warranty; you will therefore be billed for it.

BEEP KEYS

By default, the «Beep keys» are activated but it is possible to disable it 15.

PROHIBITED OPTIONS

» HERE IS A LIST OF SOME ACTIONS THAT ARE PROHIBITED WHEN USING YOUR **tearstim** (non-exhaustive)

These actions are prohibited on the grounds that they might expose you to danger or enteil the risk of irreparable damage to your device.








Do not to block the ventilation grid located on the upper part by covering the base of **tearstim** with a cloth.



Once the Optic cartridge has been removed, only touch the plastic parts and definitely not the metal parts, the lamp, the electrodes, the tube or the reflector.

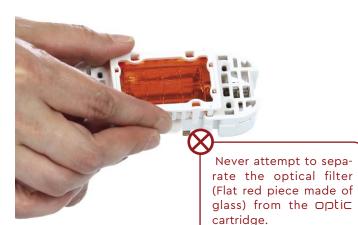



Do not attempt to open your **tearstim** device: all interventions must be carried out by people duly authorised by the manufacturer.

NOTE: Unlike the fans located inside the applicator, the other ones located inside the base of **tearstim**, will only stop when the device is unplugged.

USE OF ACCESSORIES

The Optic cartridge has a pre-programmed service life which guarantees the consistent quality of light emitted, from the first flash to the very last. The cartridge is supplied together with its activation card. The Optic cartridge and its card must be replaced once the number of available flashes is expired.

OPTIC

The GQl must be stored at room temperature. It is used in a very thick layer (5 - 6 mm in thickness), and is applied progressively throughout the session, in order to avoid any drying of QQl on the skin. Once used on the skin and subject to flash exposure, the are l must not, under any circumstances, be recovered and used on a different zone. Flash exposure of the QQl is liable to result in the modification of its optical characteristics. At the end of the session, it is removed from the surface of the skin using a paper towel or a wet compress. The QQl is removed from the optical components and the moving part of the applicator using a damp cloth, followed by the application of the clean spray.

Active ingredients:

Methylisothiazolinone and Methylchloroisothiazolinone (MCI/MI). The content of these ingredients, in a ratio of 3:1, is 0.0008%. Contains no formic aldehydes. Keep out of the light - For external use only. Not to be used on broken, burned or infected skin.

62L

Made in Europe

Made in France

These glasses mask must be worn by all persons who are present during flash procedures, in order to prevent dazzling during sessions. After each use, they should be cleaned using the clean spray.



mask

Made in China

These protective shells QUQ mask must be worn by persons under procedure, and must be adjusted correctly. They protect the eyes of the person. Disinfect the shells after each session.



EAG walk

Made in China

The spray Clea∩ is used to clean and maintain:

- The optical parts of the mobile head of the applicator:
 - External optical parts: spray directly and wipe with a dry cotton cloth.
 - Internal optical parts: Never spray directly on the internal optical parts. Take a dry cotton cloth and spray on the cloth, and then clean the filter (flat red part made of glass) with this dampened cloth. Finish cleaning with a dry part of the cloth.
- The device's touchscreen: Never spray directly on the touchscreen. Take a dry cotton cloth and spray on the

cloth, and then wipe the screen with this dampened cloth. Finish cleaning with a dry part of the cloth.

The spray Clean must only be used once the device is unplugged and the optical parts are cold.

If you intervene after using the **tearstim**, you must wait for the fan of the device to come to a complete stop before unplugging the base. This enables, among other things, the optical parts to cool down properly.

cLean



Made in France

These self-adhesive patches are used to mask small areas (such as beauty spots) which are not to be exposed to flashing. The patches must be positioned before the gel is applied. It will then be possible to administer flashing to the entire zone, regardless of the presence of beauty spots. patches are removed at the end of the session.



The Stop plate is constructed of a flash-resistant material. It is used to mask an area where flash procedure is not to be applied (for example, tattoos). The glass end of the applicator (optical guide) may also be positioned to overlap the Stop plate and the skin.

тор

Made in France

MAINTENANCE

Check that your **tearstim** is unplugged when you are undertaking its maintenance. If you intervene after using **tearstim**, you must wait for the fan of the device to come to a complete stop before unplugging the base. This enables, among other things, the optical parts to cool down properly.

NOTE: Unlike the fans located inside the applicator, the ones located inside the base of **tearstim** only stop when the device is unplugged.

tearstim does not require periodic maintenance by the manufacturer.

There is not sterile part or accessories required for use of the **tearstim**.

» BASE

PLASTIC PARTS

All plastic parts of **tearstim** must be cleaned with a clean cloth, dampened with water (without any additives).

TOUCHSCREEN

The screen must be cleaned with a clean cloth that has been dampened with the spray CLOAN (never spray directly on the touch screen).

POWER CORD

Check its perfect condition (must not be pinched or crushed, no bare wires). Clean with a cloth that has been dampened with water (without any additives).

>> APPLICATOR

MOBILE HEAD

Cleaning the optical parts (internal and external) of the mobile head with the spray Clean before and after each use maintains your **tearstim**'s effectiveness. Never spray directly on the internal parts of the applicator.

BODY OF THE APPLICATOR

All plastic parts of the applicator must be cleaned with clean cloth that has been dampened with water (without any additives).

» BASE CABLE TO APPLICATOR

This cable must always stay clean without any visible impairment. You must never bend it strongly or get it stuck. If in doubt about the cable's condition, you must stop using your **tearstim** immediately.

* THE AIR VENTS OF THE BASE AND THE APPLICATOR

The applicator and the base are ventilated. The grids are found on both the applicator and the base, on its lower and upper back part. You must check that all of these grids are clean and that there are no elements likely to clog them.

IMPORTANT: Be careful not to drop liquid into the ventilation grid located on the lower casing.

» STORAGE

- Store your **tearstim** and its accessories in its box.
- Place your tearstim in a room where the room temperature does not exceed 25°C (for immediate use), away from excessive moisture (e.g. bathroom) and in a place where it cannot be subjected to vibrations (e.g. placed on a washing machine).
- If the device suffers from an impact, it will be necessary to check the optical parts in their entirety.
- Any visible damage to the optical parts: filter (flat red part made of glass), optical guide, tube, etc. must lead to an immediate cessation of use of the device.

ASSISTANCE

» TECHNICAL DEPARTMENT

In case of doubt about the use of **tearstim**, contact our technical department. Visit your customer page at **www.esw-vision.com** and click on "My E-Swin contacts".

» ERROR MESSAGES

In addition to its own number (see table below), each error message is notified by the blinking of the warning icon 17.

SCREEN DISPLAY	MEANING	WHAT TO DO?	
01 No flash detected.		Contact our technical department. Visit your customer page at www.keepyoureyesfit.com and click on "My E-Swin contacts".	
03 04 05 08 Your device is blocked.		Unplug your device and plug it back. If the problem persists, contact our technical department. Visit your customer page at www.keepyoureyesfit.com and click on "My E-Swin contacts".	
06 (and blinking of the temperature icon 19)	Temporary blocking.	Wait for the procedure that cools down the optical parts of the applicator to finish.	
10 (and blinking of the icon that detects the activation card (18)	Loss of connection with the activation card.	Check that the activation card is present and running smoothly. Re-insert it again.	
13	You have inserted the wrong PIN code (when you started the device, the PIN code entered was different to the one previously recorded).	Follow the instructions about entering the code.	
14	You have inserted the wrong PIN code (the 2 consecutive PIN codes entered are not identical).	Contact our technical department. Visit your customer page at www.keepyoureyesfit.com and click on "My E-Swin contacts".	



MARKING

» MARKING

REF : tearstim	Reference to dry eye solution using the tearstim device.
SN	Unique serial number of your tearstim .
E-SWIN Rue des Côtes d'Orval ZA de la Prévôté 78550 Houdan – FRANCE	Year of manufacture of your device and address of the manufacturer.
IP 2X	Device protected against solid foreign body of 12,5 mm in diameter or more (IP rating).
†	Logo corresponding to a degree of protection against electric shock for parts that are applied onto the person (Part to be applied – Type BF).
	Device must be used indoors.
<u>分</u> <u>类</u>	Keep the device dry.
	Keep away from light and heat.
$\widehat{\mathbf{i}}$	It is compulsory to refer to the instructions in the user manual.
100 - 240 V~ 50-60 Hz 240 VA	Operating conditions – supply voltage (alternating current), frequency of the mains voltage, power.
A	Warning, dangerous voltage device.
\wedge	Global safety mark for electronical devices.
*	Optical radiation aperture
<u> </u>	Respect the upper and lower temperature limits indicated beside this logo.
<u>↑</u>	Atmospheric pressure Limits.
<u></u>	Relative humidity Limits.
	Do not use this product after the deadline specified beside this logo (☐□L).
LOT	The batch number of the product is indicated beside this logo (□□l).
	It is compulsory to refer to the instructions in the manual.
	Electromedical Equipment of Class II rating.

TECHNICAL CHARACTERISTICS

» SPECIFICATIONS

Impact points, specifications	2 cm x 3.75 cm (7,5 cm ²)
Speed	1 pulse each 2,2 to 5 seconds
Technology	Intense pulsed light
Wavelength	>580 - 1200 nm
Charging time / energy source	Continous operation
Dimensions (L x W x H)	270 × 210 × 380 mm max
Weight	6,4 kg max
Shipping dimensions (L x W x H)	612 × 325 × 540 mm
Shipping weight	9,9 kg max
Noise	53 dBA max
Electrical installation requirements	100 - 240 VAC
Maximum power consumption	240 VA
Frequency	50/60 Hz
Temperature	Working +5 to +25°C Stockage +5 to -65°C
Relative working humidity (non-condensing) 30 - 93 %
Atmospheric pressure	70-106 kPa

» RECYCLING AND PROCESSING



Instructions for the processing of end-of-life products: the WEEE Directive (Waste Electrical and Electronic Equipment) 2020/96/EC has been implemented to ensure that products are recycled by the application of optimum techniques for processing, exploitation and recycling, thereby contributing to the protection of the environment and human health.

Your product has been designed and manufactured using high-quality products, which are suitable for recycling and re-use.

E-Swin SAS is affiliated to an eco-organization, which undertakes the collection and processing of end-of-life products.

TECHNICAL CHARACTERISTICS

>> GUIDANCE AND MANUFACTURER'S DECLARATION

ESSENTIAL PERFORMANCE

tearstim has no essential performance.

RADIO FREQUENCY EMISSIONS

tearstim incorporates a radio frequency transmitter at 13.56 MHz, in an ASK modulation, with an acoustic pressure of less than $42 \text{ dB}(\mu\text{A/m})$ at 10 m.

ELECTROMAGNETIC EMISSIONS

GUIDANCE AND MANUFACTURER'S DECLARATION - ELECTROMAGNETIC EMISSIONS

The **tearstim** device is intended for use in the electromagnetic environment specified below.

The user should assure that it is used in such an environment.

EMISSIONS TEST	COMPLIANCE	ELECTROMAGNETIC ENVIRONMENT - GUIDANCE
RF emissions CISPR 11	Group 1	The device uses RF energy only for its internal function. Therefore, its radiated emissions are very low and are not likely to cause interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The device is suitable for use in all establishments, including
Harmonic emissions IEC 61000-3-2	Class A	domestic establishments and those directly connected to the public low voltage power supply network that supplies buildings
Voltage fluctuations / Flicker emissions IEC 61000-3-3	Passed	uses for domestic purpose.

ELECTROMAGNETIC IMMUNITY

GUIDANCE AND MANUFACTURER'S DECLARATION - ELECTROMAGNETIC IMMUNITY

The **tearstim** device is intended for use in the electromagnetic environment specified below. The user of the device should assure that it is used in such an environment.

IMMUNITY TEST	IEC60601 TEST LEVEL	COMPLIANCE LEVEL	ELECTROMAGNETIC ENVIRONMENT - GUIDANCE
Electrostatic Discharge (ESD) IEC 61000-4-2	± 8 kV contact ± 15 kV air	± 8 kV contact ± 15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%
Electrical fast transient / burst IEC 61000-4-4	± 2 kV 100 kHz	± 2 kV 100 kHz	Mains power quality should be that of a typical public low voltage power supply network.
Surge IEC 61000-4-5	± 1 kV differential mode ± 2 kV common mode	± 1 kV differential mode ± 2 kV common mode	Mains power quality should be that of a typical public low voltage power supply network.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	0 % UT for 0.5 cycle at 0,45,90,135,180,225,270,315° 0% Ut for 1 cycle at 0° 70% for 25/30 cycle at 0° 0% for 250/300 cycle, any angle	0 % UT for 0.5 cycle at 0,45,90,135,180,225,270,315° 0% Ut for 1 cycle at 0° 70% for 25/30 cycle at 0° 0% for 250/300 cycle, any angle	Mains power quality should be that of a typical public low voltage power supply network. If the user of the device requires continued operation during power mains interruption, it is recommended that device be powered from an uninterruptible power supply or a battery.
Power frequency (50/60Hz) magnetic field IEC 61000-4-8	30 A/m	30 A/m	Power frequency magnetic fields should be at levels characteristics of a typical location of a typical location connected to public low voltage power supply network.

NOTE: UT is the ac mains voltage prior to application of the test level.

GUIDANCE AND MANUFACTURER'S DECLARATION - ELECTROMAGNETIC IMMUNITY

The **tearstim** device is intended for use in the electromagnetic environment specified below.

The user of the device should assure that it is used in such an environment.

IMMUNITY TEST	IEC60601 TEST LEVEL	COMPLIANCE LEVEL
Conducted RF • IEC 61000-4-6	3Vrms • 150 kHz to 80MHz 6 V for ISM band • 3V/m	3Vrms • 150 kHz to 80MHz 6 V in ISM bands between 150 kHz to 80MHz
Radiated RF • IEC 61000-4-3	80 MHz to 2.7 GHz	3V/m • 80 MHz to 2.7 GHz

NOTE 1: At 80 MHz and 800 MHz, the higher frequency range applies.

NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption an reflection from structures, objects and peoples.

- Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site sur-
- vey should be considered. If the measured field strength in the location in which the Device is used exceed the applicable RF compliance level above, the Device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the Device.
- b Over the frequency range 150 kHz to 80 MHz, field strength should be less than 3 V/m.

TECHNICAL CHARACTERISTICS

ELECTROMAGNETIC IMMUNITY

GUIDANCE AND MANUFACTURER'S DECLARATION - IMMUNITY TO PROXIMITY FIELDS FROM RF WIRELESS COMMUNICATIONS EQUIPMENT

tearstim is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or user of the Device can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communication equipment (transmitters) and the Device, as recommended below, according to the maximum output power of the communications equipment

			· · ·			
TEST FREQUENCY (MHz)	BAND ^{a)} (MHz)	SERVICE a)	MODULATION b)	MAXIMUM POWER (W)	DISTANCE (m)	IMMUNITY TEST LEVEL (V/m)
385	380 –390	TETRA 400	Pulse modulation ^{b)} 18 Hz	1,8	0,3	27
450	430-470	GMRS 460, FRS 460	FM ^{c)} ± 5 kHz deviation 1 kHz sine	2	0,3	28
710						
745	704-787	LTE Band 13, 17	Pulse modulation ^{b)} 217 Hz	0,2	0,3	9
780			217 112			
810						
870	800-960	800–960 GSM 800/900, TETRA 800, iDEN 820, CDMA 850, LTE Band 5	Pulse modulation ^{b)} 18 Hz	2	0,3	28
930		020, CDMA 030, ETE Balla 3	10 112			
1720						
1845	1700-1990	LTE Band 13, 17	Pulse modulation ^{b)} 217 Hz	2	0,3	28
1990		"	217 112			
2450	2400-2570	Bluetooth, WLAN, 802.11 b/g/n, RFID 2450, LTE Band 7	Pulse modulation ^{b)} 217 Hz	2	0,3	28
5240						
5500	5100-5800	WLAN 802 .11 a/n	Pulse modulation ^{b)} 217 Hz	0,2	0,3	9
5785						

NOTE: If necessary to achieve the IMMUNITY TEST LEVEL, the distance between the transmitting antenna and the ME EQUIPMENT or ME SYSTEM may be reduced to 1 m. The 1 m test distance is permitted by IEC 61000-4-3.

a) For some services, only the uplink frequencies are included.

b) The carrier shall be modulated using a 50 % duty cycle square wave signal.

c) As an alternative to FM modulation, 50 % pulse modulation at 18 Hz may be used because while it does not represent actual modulation, it would be worst case.

LIGHT EMISSION

tearstim is classified under risk group 3 related to "thermic retinal" danger.

The inhomogeneity of lighting on the applied surface is below to 20%.

The ocular risk is negligible from a distance, between the eye and the surface of emission, of 7,40 meters.

Pulse train overall duration: 170 ms.

Output energy on the flashing area versus user's selection:

ENERGY SETTING	FLUENCE (J/cm²)
1	9,0
2	9,8
3	10,6
4	11,4
5	12,2
6	13,0

Pulse train contains 8 pulses defined by:

PULSE NUMBER	PULSE DURATION (in ms)	DELAY TO NEXT PULSE (in ms)
1	3	13
2	3	13
3	3	13
4	12	50
5	3	13
6	3	13
7	3	13
8	12	End of pulse train



STANDARDS

PRECAUTIONS FOR USE

Never bring the base unit or the applicator into contact with water. Do not open the base unit or the applicator, as you may risk exposure to high voltages. Never use cartridges and accessories other than those designated and sold by E-Swin SAS for use with the **tearstim**.

ENVIRONMENTAL PROTECTION

You must abide by local regulations for the disposal of packaging and consumables. Insofar as possible, recycling should be encouraged.

GUARANTEE CONDITIONS

Your device is guaranteed for professional use.

The term of this guarantee is associated with legislation in force in each country.

Any error in connection, any incorrect handling, any use of the device other than for dry eye procedure and, in general, any use of the device which fails to observe the conditions described in this manual will invalidate the guarantee.

The company E-Swin SAS will not accept liability for any accident arising from failure to observe the instructions contained in this manual, or from differences in the information provided by the labelling or the touch screen of **tearstim**.

The manufacturer's guarantee for parts and labour will only be valid if the device is returned in all the items of its original packaging (boxes, packing blocks, etc.).

All the packaging in which your **tearstim** was supplied should therefore be carefully stored.

CONTACT



For more information contact: **contact@esw-vision.com** or visit: **www.keepyoureyesfit.com**



ZA de la Prévôté Rue des Côtes d'Orval 78550 Houdan FRANCE +33 1 30 46 37 61



Copyrigh 2020 by E-Swin. All rights reserved. tearstim is a registered brandmark by E-Swin. Ref. Nr. M036GB000A___ RevA